



CANBUS UPGRADE ALARM

User Manual

autoXtreme
ELECTRONICS

autoxtreme.com.au

p. 1800 818 288 | e. info@autoxtreme.com.au

facebook.com/AutoXtremeAustralia
twitter.com/AutoXtremeAus

Contact us for your nearest service centre
Part of the WorldMark Group

autoXtreme
ELECTRONICS

VEHICLE SECURITY



CONGRATULATIONS

on the purchase of your Canbus Alarm Upgrade for your vehicle.



Operation

1. Locking your vehicle with your factory remote will arm your alarm. The siren will sound once and the status led will flash 3 times and pause continuously. If you need to turn your external sensor off then press the lock button on your remote again within 2 seconds of locking your vehicle. The alarm will emit a tone to tell you the sensor has been turned off for this arm cycle only.
2. If you lock your vehicle and the siren emits a series of tones you may have left a door, bonnet or boot open.
3. Unlocking your vehicle with your factory remote will disarm your upgrade alarm. The siren will sound twice to confirm that the alarm has been disarmed.
4. Should someone attempt to enter the vehicle by opening a door, bonnet or boot or by smashing a window when the alarm is armed, the siren will sound for 30 seconds and if connected will flash your hazards or park lights.

Emergency Override Procedure

The alarm can be disarmed should your factory remote stop working.

1. Refer to your 5-digit pin number supplied with your alarm.
2. Each digit needs to be entered by using the ignition key or the hidden override button. Your dash mount LED doubles up as a push-button.
3. Turn the ignition on and off 5 Times within 10 seconds or press the override button (LED) for 5 seconds until the status led turns on permanently.
4. Turn the ignition off or release the button and let the led flash the number of times equivalent to the first number of your pin. When successful turn the ignition back on or press the override button. You have now entered your first digit.
5. Follow this procedure until you have entered all 5 digits. The status led will flash rapidly and the alarm will disarm after entry of the 5th digit. (Please note: a zero is attained by 10 flashes of the led.)

**ADVANCED VEHICLE
SECURITY SYSTEMS**

**auto
WATCH**

**555 CLAM
CENTRAL LOCKING
ALARM MODULE**

OWNER'S MANUAL



**A QUALITY
PRODUCT FROM
AUTOWATCH**

INTRODUCTION

Congratulations on the purchase of the Autowatch 555 CLAM (Central Locking Alarm Module). This microprocessor controlled system will upgrade your existing keyless entry/immobiliser system to a complete alarm/immobiliser without the need for additional transmitters.

ARMING THE ALARM AND IMMOBILISER

Use the original transmitter to lock the doors as normal.



Provided that the ignition is off, the alarm and immobiliser will arm and the status light will rapid flash for 40 seconds before reverting to an armed sequence of "3 flashes then pause".

DISARMING THE ALARM AND IMMOBILISER

Use the original transmitter to unlock the doors as normal.



The alarm and immobiliser will disarm and the status light will extinguish.

* In most installations it is possible to ensure that the alarm will not disarm by unlocking the doors from the inside of the vehicle or by using the key.

INTRUSION DETECTION

When the alarm is on, it will detect the ignition being turned on, and the doors, boot and trunk opening. Additional sensors may have been installed to detect movement within the vehicle.



The siren or hooter will sound and the hazards will flash for thirty seconds, unless the alarm is turned off. Each zone will trigger the alarm a maximum of three times per one cycle.

DOOR OPEN INDICATION (OPTIONAL)

If either Doors, Boot, or Bonnet are not properly closed while the alarm is arming.



The siren will give 2 beeps.

MOVEMENT SENSOR AND EARLY WARNING ISOLATION

Push the hidden button once with the ignition off.



The siren or hooter will sound once and the indicators will flash once. Early warning will be isolated next time the alarm is turned on.

* To limit noise pollution early warning is limited to 64 activations each time the alarm is turned on.

Push the hidden button twice within 2 seconds with the ignition off.



The siren or hooter will sound once and the indicators will flash once. Movement sensor will be isolated next time the alarm is turned on.

* This feature should be used if the alarm is turned on with people or pets in the vehicle or if windows are left open in a car fitted with an ultrasound movement sensor.

INTERIOR LIGHT (OPTIONAL)

Turn the alarm off.



The interior light will illuminate for 40 seconds or until the ignition is turned on.

LOCK/UNLOCK WITH IGNITION (OPTIONAL)

Turn the ignition on.



If selected, the doors will lock.

Turn the ignition off.

If selected, the doors will unlock.

TRUNK RELEASE

Opening the boot with a dedicated boot button on the transmitter while the alarm is armed.



The alarm will be isolated for the duration of the boot being open and then will rearm after the boot is closed.

EMERGENCY OVERRIDE (PIN CODE ATTACHED TO KEYTAG - KEEP PIN IN A SAFE PLACE)

The alarm and immobiliser can be disarmed without the remote control by entering the override PIN. If the alarm was armed, the siren will sound until your PIN is successfully entered.

- * Refer to the PIN attached to your keytag. Do not reveal the PIN and keep in a safe place.
Enter each digit of the PIN individually as follows:
(Note that a zero is represented by 10 flashes)

While the Status light is flashing switch the ignition on and push the hidden button once.



The Status light will begin flash count.
Note: Entering the emergency override also activates "VALET MODE" (which is indicated by one beep on the siren when the ignition is switched off). To exit "VALET MODE" make sure that the doors are closed and the system is disarmed, then press and hold the hidden button and lock and unlock the doors with the original transmitter.

Example : if the override PIN is 2-1-4-1-1

- Push the hidden button after 2 flashes - 1st. digit entered.
- Push the hidden button after 1 flash - 2nd. digit entered.
- Push the hidden button after 4 flashes - 3rd. digit entered.
- Push the hidden button after 1 flash - 4th. digit entered.
- Push the hidden button after 1 flash - 5th. digit entered.

HJACK (OPTIONAL)

With the alarm disarmed and the ignition on push the hidden button.



The hijack sequence will be cancelled and the immobiliser will be disarmed.

If the hidden button is not pushed within 60 seconds of the ignition being turned on, the hijack routine will commence and can be cancelled by pushing the hijack button.

KEYGUARD (OPTIONAL)

With the alarm disarmed and the ignition on push the hidden button.



The keyguard sequence will be cancelled and the immobiliser will be disarmed.

If the Keyguard option is selected it will automatically activate 30 seconds after the ignition is turned off.

VALET MODE

To enter "VALET MODE" make sure that the doors are closed and the alarm is disarmed, press and hold the hidden button, lock and unlock the vehicle with the original transmitter.



The following features will be disabled:
Hijack, Keyguard and Passive immobiliser features.

Valet mode can be deselected by repeating the process.

The siren will sound once every time the ignition is switched OFF to indicate Valet mode is selected.

GUARANTEE

PFK ELECTRONICS (PTY) LIMITED AND KNIGHTWATCH (UK) LIMITED WARRANTS THIS PRODUCT TO THE ORIGINAL CONSUMER PURCHASER TO BE FREE FROM DEFECTS IN WORKMANSHIP AND MATERIAL FOR A PERIOD OF TWO YEARS, SHOULD THIS PRODUCT BE FOUND TO BE DEFECTIVE IN THE VEHICLE IT WAS ORIGINALLY INSTALLED. PFK ELECTRONICS SHALL REPAIR OR REPLACE THE PRODUCT OR ANY PART OF THE PRODUCT WHICH PFK ELECTRONICS AGREES IS DEFECTIVE WITHOUT CHARGE. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT WHICH HAS BEEN DAMAGED BY ACCIDENT, PHYSICAL OR ELECTRICAL ABUSE, IMPROPER INSTALLATION, ANY USE CONTRARY TO ITS INTENDED FUNCTION, UNAUTHORISED SERVICE (I.E. SERVICE BY ANYONE OTHER THAN PFK ELECTRONICS OR ITS AUTHORISED AGENTS/SERVICE PERSONNEL), FIRE, FLOODING, LIGHTNING OR ACTS OF GOD.

INDEMNITY

PFK ELECTRONICS (PTY) LIMITED AND KNIGHTWATCH (UK) LIMITED SHALL NOT BE RESPONSIBLE FOR ANY REMOVAL AND/OR INSTALLATION CHARGES, DAMAGES TO OR THE THEFT OF THE VEHICLE OR ITS CONTENTS, OR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ANY FAILURE OF THE PRODUCT TO FUNCTION PROPERLY. UNDER NO CIRCUMSTANCES SHOULD THIS WARRANTY, OR THE PRODUCT COVERED BY IT, BE CONSTRUED AS AN INSURANCE POLICY AGAINST LOSS. PFK ELECTRONICS NEITHER ASSUMES NOR AUTHORISES ANY PERSONS OR ORGANIZATION TO MAKE ANY WARRANTIES, NOR DOES IT ASSUME ANY LIABILITY IN CONNECTION WITH THE SAFE INSTALLATION, OR USE OF THIS PRODUCT. THIS IS THE COMPLETE PFK ELECTRONICS WARRANTY AND NO OTHER WARRANTY EXISTS.

ADVANCED VEHICLE SECURITY SYSTEMS

DPFK 555/512 R.3

Tugela Press (036) 6372251 T/P 196-926

